



Using instructions

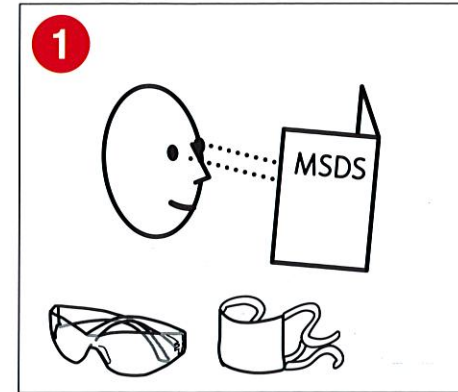


Always read the material safety data sheet (MSDS) and follow the safety instructions.

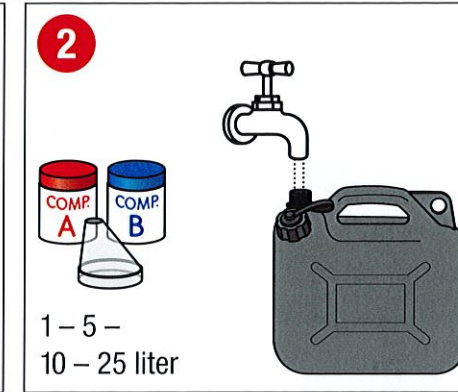


1 – 5 –
10 – 25 liter


Fill the container with the exact amount of (tap) water.

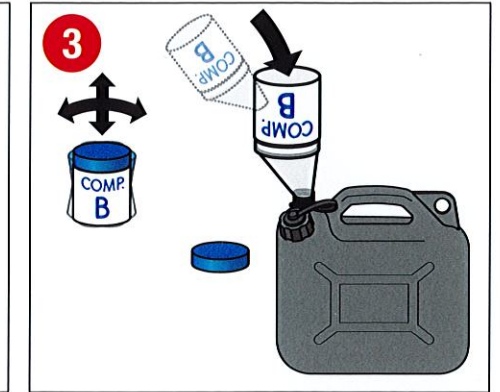

First, shake the jars of powder, and add component B to the container with water.

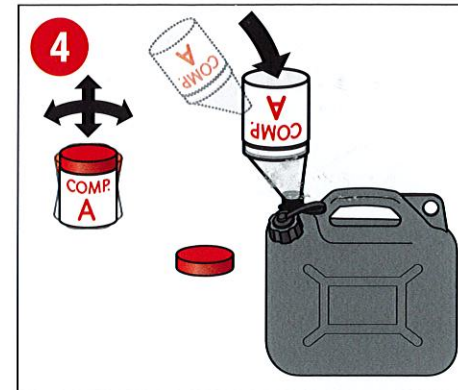


Afterwards add component A to the container.

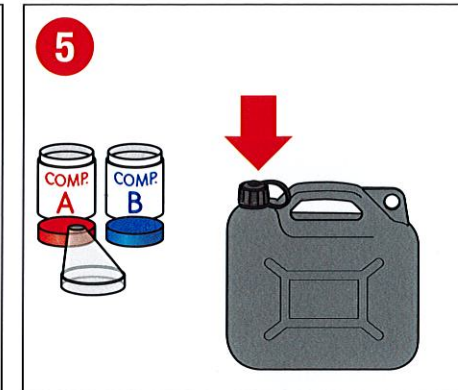

Securely close the container.




Do not shake or stir.

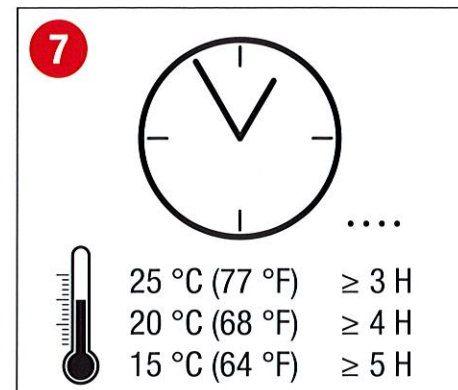

Wait according to the timetable.



Shake or stir the solution gently –
Beware of ClO₂ gas release.

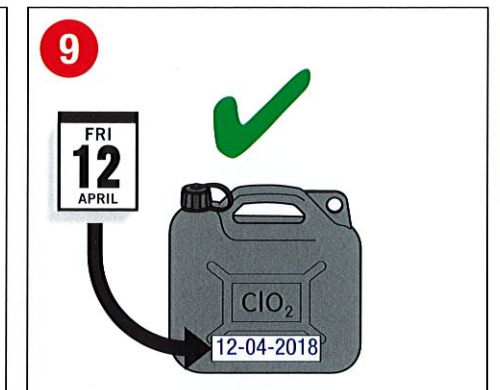


TwinOxide solution is ready for use for approx. 30 days – write the date of preparation on the label of the container.



Store in a cool and dark place.

For bigger volumes
see separate using
instructions.

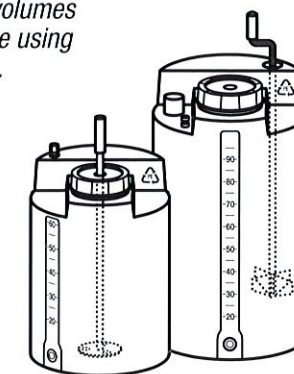

50 – 100 liter



500 – 1000 liter

TwinOxide[®]
Superior Water Disinfection Power